
BL14.0 Bed locators




DATASHEET AND INSTALLATION GUIDE

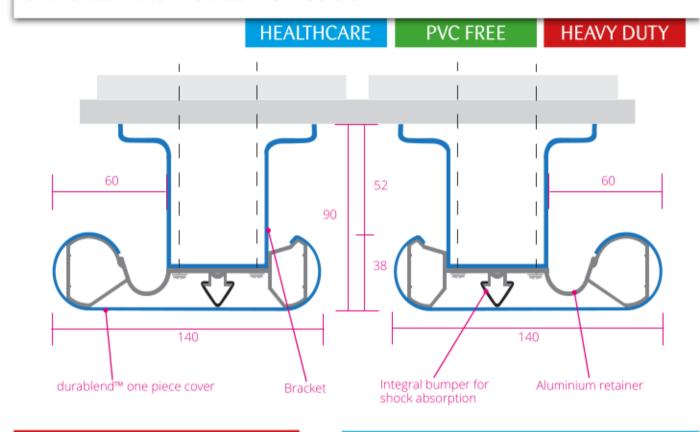

Samples can be provided upon request, 01420 543 222

for RAL, LRV and more visit:

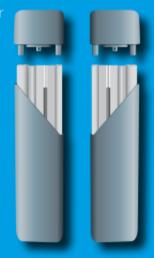

www.sdsprotection.co.uk/colours

| | | | | | | | | | | | - |
|--|--|--|--|--|--|--|--|--|--|--|---|
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| | | | | | | | | | | | |





























BL14.0 Bed locators





DATASHEET AND INSTALLATION GUIDE

HEALTHCARE

PVC FREE

HEAVY DUTY

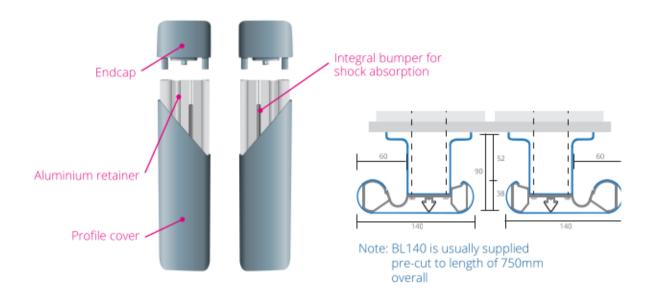

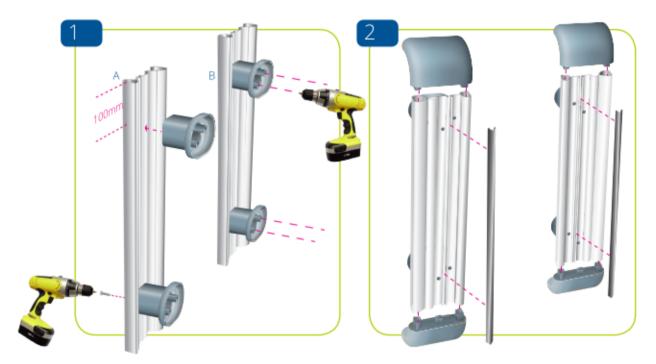

A. Fix the brackets onto the back of the aluminium retainer using short self-tapping screws through the front of the retainer nd into the bracket itself – brackets being attached 100mm from each end.

B. Then drill through the retainer using the brackets as a guide.

Attach the endcaps to the retainer and secure with short self-tapping screws. Clip the integral bumper into the middle of the retainer.

SDS Protection Ltd

Unit 4. Guildford Road Trading Estate. FARNHAM SURREY GU9 9PZ

www.sdsprotection.co.u sales@sdsprotection.co.u 01420 543 22



























DATASHEET AND INSTALLATION GUIDE

HEALTHCARE

PVC FREE

HEAVY DUTY



Mark fixing points on the wall using the drilled retainer as a template. Fix the retainer onto the wall with construction approved fixings.



Attach the cover starting from the outside edge and pushing inwards to ensure a snug fit.



SDS Protection Ltd





















