
### db **CR125** Crash Rail

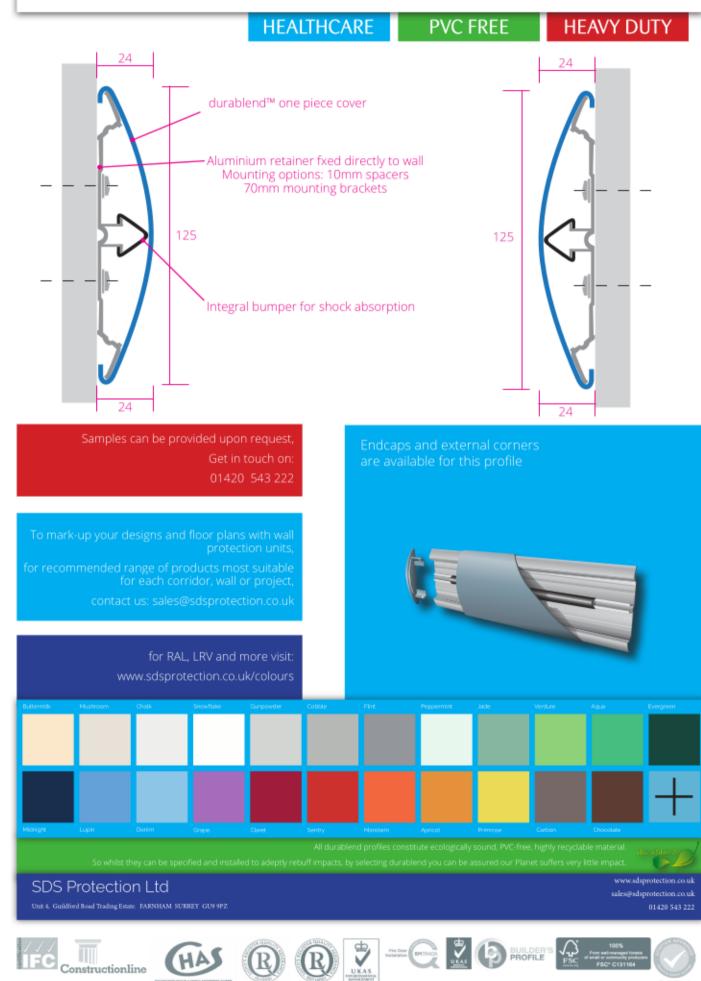





# db **CR125** Crash Rail

Endcap



**PVC FREE** 

24

**HEAVY DUTY** 

### DATASHEET AND INSTALLATION GUIDE

HEALTHCARE


Integral bumper for shock absorption 125 Profile cover Aluminium retainer Insert the integral bumper into the retainer and then cut the aluminium retainer to the correct length. Remember to allow for an endcap at either end. 2 Insert and attach endcaps using 15mm screws w.sdsprotection.co.uk SDS Protection Ltd UKAS PROFILE Constructionline

## db **CR125** Crash Rail




#### DATASHEET AND INSTALLATION GUIDE

#### HEALTHCARE PVC FREE HEAVY DUTY

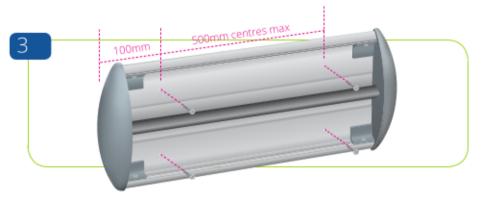

Starting at 100mm from each end, drill holes through the retainer at a maximum of 500mm centres. Mark fxing points on the wall using the drilled retainer as a template. Use construction approved fxings to affx retainer to the wall.

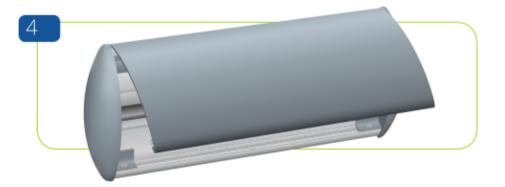

Measure between endcaps and cut the cover to length. Clip on the cover starting from the top and pushing downwards ensuring a snug ft.



#### SDS Protection Ltd

www.sdsprotection.co.uk ales@sdsprotection.co.uk 01420 543 222





R R

UKAS



