


CR200 Crash Rail

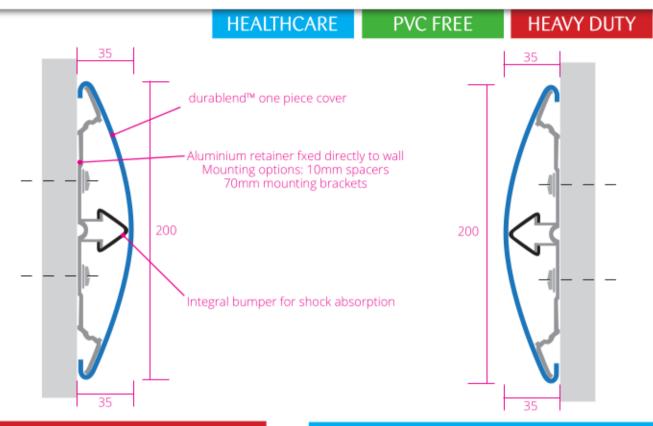

DATASHEET AND INSTALLATION GUIDE



Samples can be provided upon request, Get in touch on: 01420 543 222

To mark-up your designs and floor plans with wall protection units,


for recommended range of products most suitable for each corridor, wall or project.

contact us: sales@sdsprotection.co.ul

for RAL, LRV and more visit: www.sdsprotection.co.uk/colours

Endcaps and external corners are available for this profile



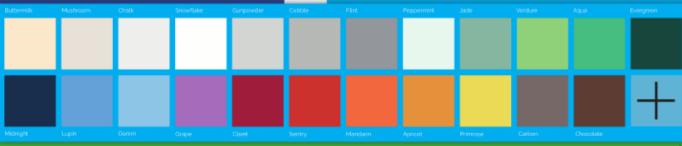

All durablend profiles constitute ecologically sound, PVC-free, highly recyclable material.

So whilet thou can be specified and installed to adopt breity iff impacts by selecting durableed way can be assured as a Planet of forevery little impa-



Unit 4. Guildford Road Trading Estate. FARNHAM SURREY GU9 9P2

www.sdsprotection.co.u sales@sdsprotection.co.u





























DATASHEET AND INSTALLATION GUIDE

HEALTHCARE

PVC FREE

HEAVY DUTY

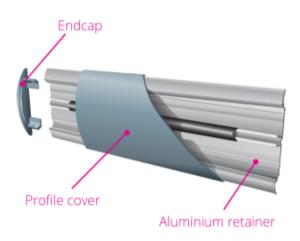

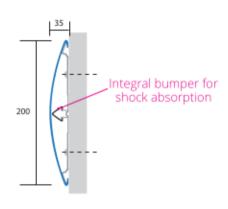



Insert the integral bumper into the retainer and then cut the aluminium retainer to the correct length. Remember to allow for an endcap at either end.



Insert and attach endcaps using 15mm screws

SDS Protection Ltd

























CR200 Crash Rail




DATASHEET AND INSTALLATION GUIDE

HEALTHCARE

PVC FREE

HEAVY DUTY

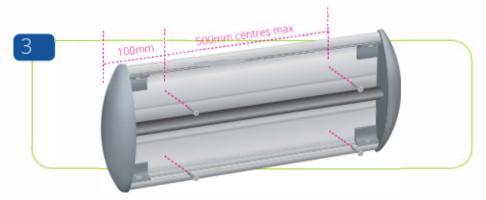

Starting at 100mm from each end, drill holes through the retainer at a maximum of 500mm centers, mark fixings on the wall using the drilled retainer as a template. Use construction approved fixings to affix retainer to the wall.



Measure between endcaps and cut the cover to length. Clip on the cover starting from the top and pushing downwards ensuring a snug ft.



SDS Protection Ltd

AND A GORDON FORM TRACING Entire FARNISAM SURREY CARGES

www.utsprotection.co.u sales asdsprotection.co.u





















