

## RR150-200 Rub Rail 😻 SDS




DATASHEET AND INSTALLATION GUIDE


CRASH RAIL


**HEALTHCARE** 

**PVC FREE** 


**LIGHT DUTY** 

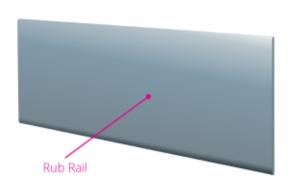



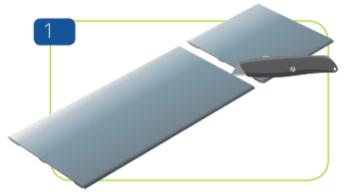

Measure the wall then cut the rub rail to the correct length using a sharp Stanley knife.

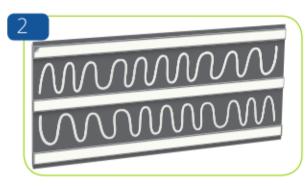

Make sure wall is clean. Apply construction approved adhesive between the bands of tape. Remove the double sided tape backing.



Apply to the wall making sure the rub rail is level. Ensure the rub rail is securely stuck by applying a firm and even pressure.



Clean finished durablend™ RR150/200 rub rail with SDS Protection durablend™ approved cleaner.

## SDS Protection Ltd
























## RR150-200 Rub Rail **SDS**



## DATASHEET AND INSTALLATION GUIDE

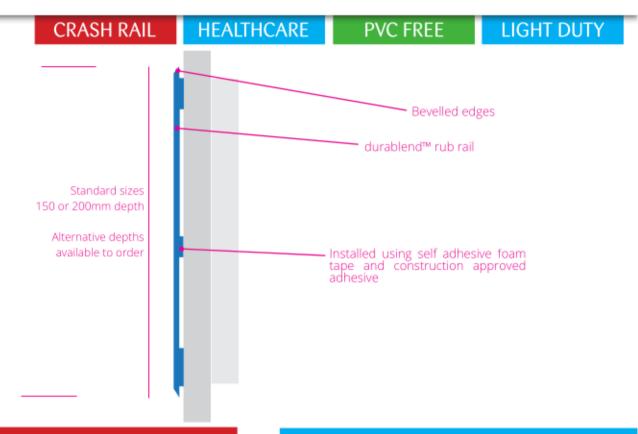

Samples can be provided upon request, 01420 543 222

for RAL, LRV and more visit: www.sdsprotection.co.uk/colours



























