


ID SRW200 Crash Rail SDS




DATASHEET AND INSTALLATION GUIDE

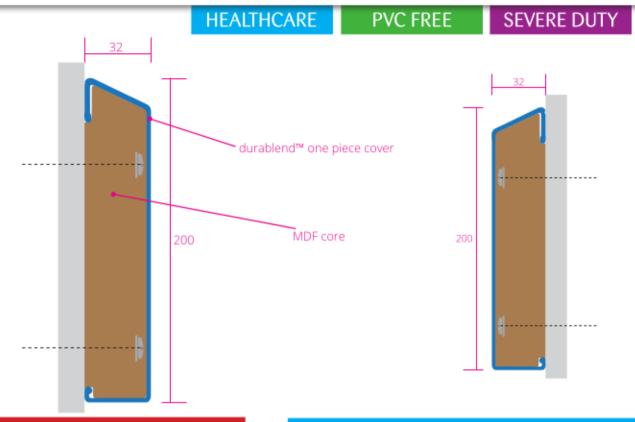

Samples can be provided upon request, 01420 543 222

for RAL, LRV and more visit: www.sdsprotection.co.uk/colours

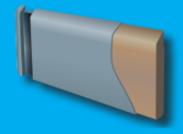

Buttermilk	Mushroom	Chalk	Snowflake	Gunpowder	Cobble				
									\top
Midnight	Lupin	Denim		Claret			Primnose	Chocolate	



























SRW200 Crash Rail SDS





DATASHEET AND INSTALLATION GUIDE

HEALTHCARE

PVC FREE


SEVERE DUTY

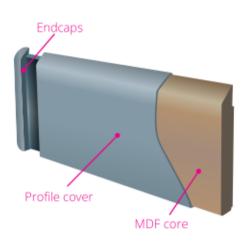





Drill holes through the end cap retainer and fix to the wall using the appropriate fixings leaving 35mm from your start point to allow for the end cap.

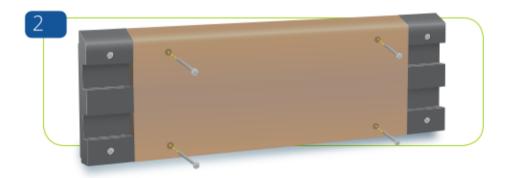

Cut the MDF core to required length. Drill holes at maximum 800mm centres, starting 50mm from either end. Finish the MDF core run with another end retainer.

SDS Protection Ltd



























DATASHEET AND INSTALLATION GUIDE


HEALTHCARE

PVC FREE

SEVERE DUTY



Fix end caps onto retainers using screws - maximum length 25mm

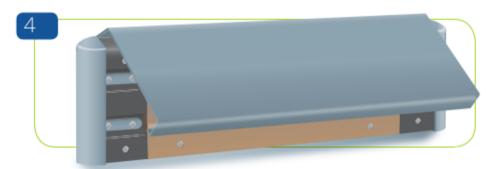

Measure between end caps and cut cover to length - make a joint if necessary. Clip on profle from the upper part of the MDF core by pushing downwards



SDS Protection Ltd





















